

Dear Sir/Madam,

In an the event your remote control / touch key / jackplug or transponder is unable to disarm your immobiliser, each system provides an emergency override to allow the user to bypass the system.

A four digit personal identification number (PIN) is programmed in to the system memory at the time of manufacture. Record of the factory PIN can be found on the back page of your user guide.

To use the PIN : -

- Sit inside the car, if the alarm is still sounding; allow the cycle to finish. Ensure the doors are closed so as not to re-trigger the system.
- Turn the ignition switch to the ON position, this will cause the LED to stop flashing and remain lit.
- Turn the ignition key back on position to ACC and count the flashes from the LED.
- Turn the ignition key to the ON position after the correct number of flashes have occurred.
- Repeat the previous two steps for the remaining digits of the PIN.
- When all four digits have been entered correctly, the system will disarm.
- The transponder immobilisers will flash the LED very quickly when all digits have been entered correctly. The ignition must be left ON until the LED extinguishes.

NB: Any “0” in the PIN signifies 10 not 0.

Should you experience any difficulty in reprogramming the remote, please do not hesitate to contact one of the technical staff here at Dynamco on (08) 92212345 during West Australian business hours.

Regards

Dynamco Helpdesk.